

USER MANUAL



Part descriptions

- | | |
|---------------------------------|-------------------------|
| 1. Solar Panel | 9. Radio Indicator |
| 2. Reading Lamp | 10. Volume Button |
| 3. LED Blinking Light | 11. Radio Scan Button |
| 4. Charging Handle | 12. Radio On/Off Switch |
| 5. Reading Lamp Switch | 13. Speaker |
| 6. Functions Switch | 14. USB Output |
| 7. Battery (Capacity) Indicator | 15. DC Input |
| 8. Charging Indicator | 16. Base |

Operation Instruction


Please charge item before using

- 1) **Charging methods**
 - a) Via solar panel (1).
 - b) Via USB. Use NOKIA adapter (15) and the attached cable. Plug it into a USB connection, e.g. computer
 - c) Via crank dynamo (4). Keep 2 turn per second. Both directions are possible.
- 2) **Charge mobile phones or digital equipment**
Connect mobile phone or digital equipment at the 5V USB port (14).
- 3) **Radio**
Turn the radio on (12) with and the indicator 'Radio (9)' will be shown. The original frequency is 108MHz. Select the radio station with up and down buttons (11).
- 4) **Light**
Torch function with 3 LED lights: Switch on at the button (6).
- 5) **Reading lamp (12 LED light)**
Open the lamp and turn on at switch (5) and adjust the brightness.
- 6) **Siren and blinking light**
Switch button (6) to siren.
- 7) **Battery Capacity Indicator**
Battery capacity (7): 1 = 25% left, 2 = 50% left, 3 = 75% left, 4 = 100% full



ATTENTION

1. This item is not intended for children under age 8.
2. Do not use this item in extreme temperatures, dusty or moist conditions.
3. Charge this item if the indicator shows the battery capacity 25% left.
4. Do not use erodent liquid to clean this item, please use neutral liquid.

 **REMARK:** Please turn off all functions if this item is not being used, to avoid any damage of built-in battery.